USB Driver Installation Guide

Our website provides two versions of the USB driver as below.

CP210x_Windows_Driver_v6.7.6.zip for earlier versions of Windows XP/Windows 7/8

CP210x_Windows_Driver_v10.1.3.zip for Windows 10

1. Unzip the file, run ***CP210xVCPInstaller_x64.exe*** for 64-bit system or ***CP210xVCPInstaller_x86.exe*** for others, follow the prompts and complete the installation.

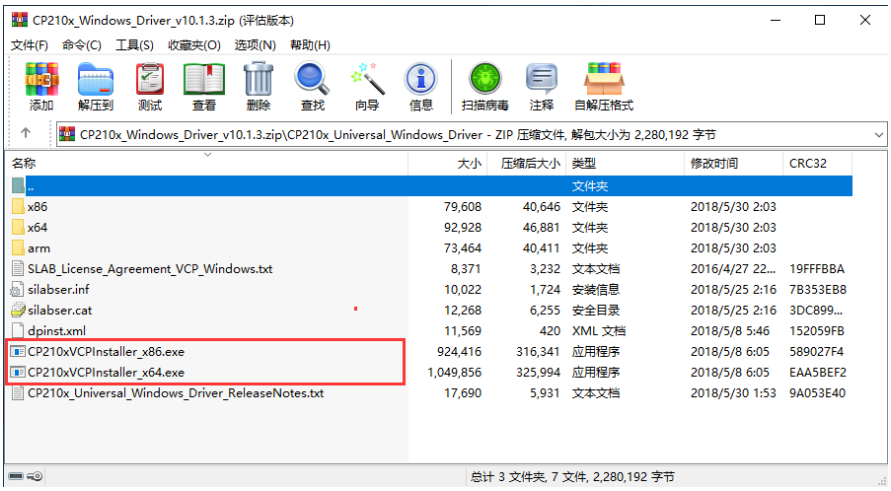

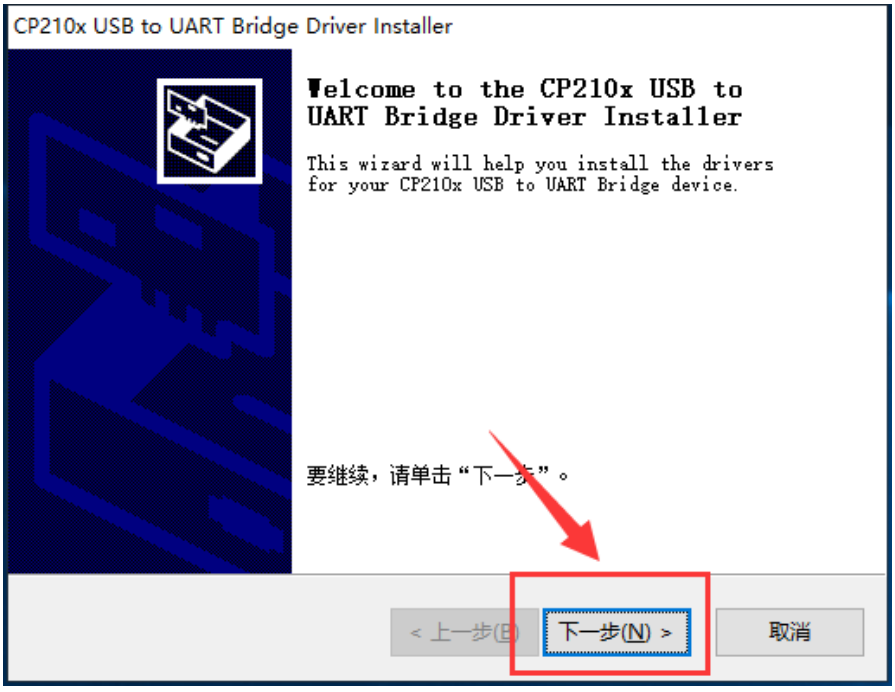

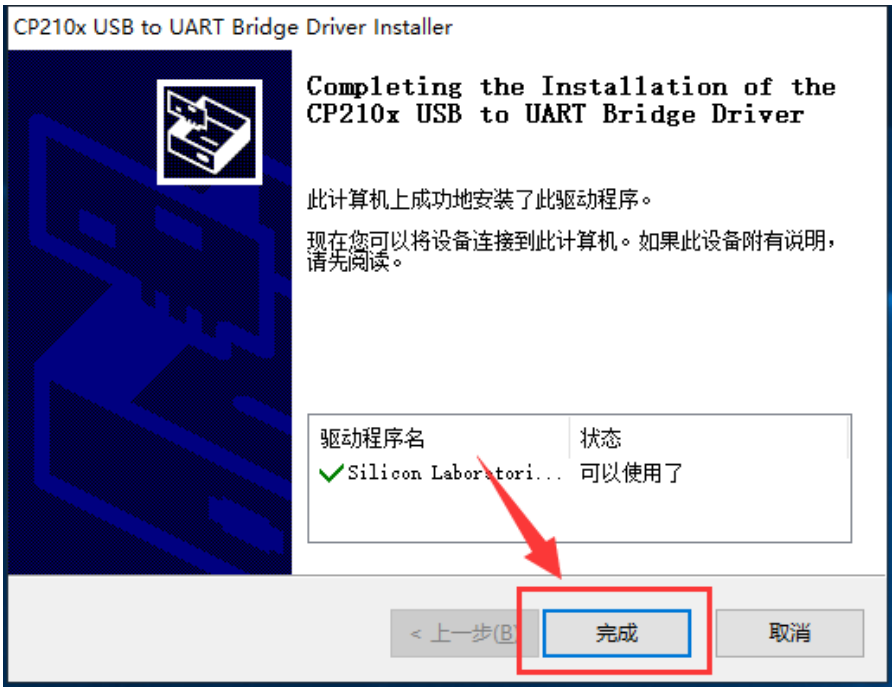

2. After setup, insert the USB adapter into the PC and wait until the windows finishes scanning and installing the new hardware. Then open the Device Manager and find the item ***Silicon Labs CP210x USB to UART Bridge (COMX)*** from the Ports (COM and LPT) List, remember this port number and it will be used later.

设备管理器
文件(F) 操作(A) 查看(V) 帮助(H)
EAGLE-PC
IDE ATA/ATAPI 控制器
Jungo
便携设备
处理器
磁盘驱动器
存储控制器
打印队列
打印机
端口 (COM 和 LPT)
Silicon Labs CP210x USB to UART Bridge (COM3)
打印机端口 (LPT1)
通信端口 (COM1)
计算机
监视器
键盘